IF YOU NEED SERVICE

WHIRLPOOL CUSTOMER CARE

Whirlpool (Australia) Pty Limited and Whirlpool New Zealand provide a two year warranty from the date of purchase of this Microwave Oven. The warranty covers both parts and labour to correct defects in materials or workmanship.

However, the benefits conferred by this express warranty are additional to all other conditions, warranties, guarantees, rights and remedies expressed or implied by consumer legislation enacted in either Australia or New Zealand and all other obligations and liabilities on the part of the manufacturer or supplier and nothing contained herein shall restrict or modify such rights, remedies, obligations or liabilities.

See the included warranty card for warranty service details.

For Whirlpool Service within Australia call 1300 361 166

For Whirlpool Customer Assistance within Australia call 1300 363 344

For Whirlpool Service and Customer Assistance within New Zealand call 0800 442 584

TECHNICAL SPECIFICATIONS

Supply voltage	230-240 V/50 Hz
Rated Power Input	2400 W
Fuse	10 A
	H x W x D
Outer dimensions:	318 x 529 x 450
Oven compartment:	205 x 335 x 370

4619 694 24053

GB

Whirlpool Sweden AB

Instructions for use

6MT 244

Whirlpool

CONTENT

GB

	PAGE
A NOTE TO YOU	3
ENVIRONMENTAL HINTS	3
OVEN OVERVIEW	3
SYMBOL DESCRIPTION	4
CHILD SAFETY / EMPTY OVEN START PROTECTION	4
TURNTABLE ON / OFF	4
INSTALLATION	5
SAFETY PRECAUTIONS	6
SAFETY SUGGESTIONS & PRECAUTIONS	7
ACCESSORIES	8
COOKING INTERRUPTION	9
HOW TO CHOOSE POWER LEVEL	9
HOW TO USE THE OPTIONAL CLOCK DISPLAY	10
JET START FUNCTION	11
HOW TO COOK & REHEAT WITH MICROWAVES	12
HOW TO USE THE JET DEFROST	13
AUTO COOK	14
AUTO COOK FUNCTION	15
HOW TO USE THE GRILL	16
HOW TO USE THE GRILL & MICROWAVES	17
HOW TO USE THE CRISP FUNCTION	18
HOW TO USE THE AUTO CRISP	19
COOKING EGGS IN THE MICROWAVE OVEN	21
MAINTENANCE & CLEANING	22
TROUBLE SHOOTING GUIDE	23
DATA FOR TEST HEATING PERFORMANCE	23
IF YOU NEED SERVICE	24

TROUBLE SHOOTING GUIDE

If the oven does not work, do not make a service call until you have made the following checks:

* The Turntable and turntable support is in place.
* The Plug is properly inserted in the wall socket.
* The Door is properly closed.
* Check your Fuses and ensure that there is power available.
* Check that the oven has ample ventilation.
* Wait for ten minutes and then try to operate the oven once more.
* Open and then close the door before you try again.

This is to avoid unnecessary calls for which you will be charged. (if outside the warranty period.) When calling for Service, please give the serial number and type number of the oven (see Service label). Consult your warranty booklet for further advice.

Important:
If the mains cord needs replacing it should be replaced by the original mains cord, which is available via our service organisation. The mains cord may only be replaced by a trained service technician.

⚠ WARNING!

***Service only to be carried out by a trained service technician**. It is hazardous for anyone other than a trained person to carry out any service or repair operation which involves the removal of any cover which gives protection against exposure to microwave energy.*

Do not remove any cover.

DATA FOR TEST OF HEATING PERFORMANCE

In accordance with IEC 705.

The International Electrotechnical Commission, SC. 59H, has developed a standard for comparative testing of heating performance of different microwave ovens. We recommend the following for this oven:

Test	Amount	Approx. time	Power level	Container
12.3.1	1000 g	12 min	750 W	Pyrex 3.227
12.3.2	475 g	5 min	750 W	Pyrex 3.827
12.3.3	900 g	14 min	750 W	Pyrex 3.838
12.3.4	1100 g	20 min	Grill + 650 W	Pyrex 3.827
12.3.6	1200 g	23 min	Crisp	Place on crisp plate
13.3.0	500 g	Jet defrost		Place on turntable

MAINTENANCE & CLEANING

Cleaning is the only maintenance normally required. It must be carried out with the microwave oven disconnected. Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversly affect the life of the appliance and possibly result in a hazardous situation.

Do not use metal scouring pads on the inside of the oven cavity. They will scratch the surface.

At regular intervals, especially if spillovers have occurred, remove the turntable, the turntable support and wipe the base of the oven clean.

This oven is designed to operate with the turntable in place.

Do not operate the microwave oven when the turntable has been removed for cleaning.

Use a mild detergent, water and a soft cloth to clean the interior surfaces, front and rear of the door and the door opening.

Do not allow grease or food particles to build up around the door.

For stubborn stains, boil a cup of water in the oven for 2 or 3 minutes. Steam will soften the marks.

Adding some lemon juice to a cup of water, placing this on the turntable and boiling for a few minutes can eliminate odours inside the oven.

The Grill element does not need cleaning since the intense heat will burn off any splashes, but the ceiling beneath it may need regular cleaning. This should be done with warm water, detergent and a sponge.

DISHWASHER SAFE:

Turntable support.

Glass turntable.



Crisp handle.



Wire rack.



CAREFUL CLEANING:

The Crisp-plate should be cleaned in mild, detergent water. Heavily soiled areas can be cleaned by pre-soaking prior to washing.



Always let the crisp-plate cool off before cleaning.

Do not immerse or rinse with water while the crisp-plate is hot. Quick cooling may damage it.

Do not use steel-wool pads. This will scratch the surface.

⚠ WARNING!

The door seals and the door seal areas *must be regularly inspected for damage. If these areas are damaged the appliance should not be operated until it has been repaired by a trained service technician.*

Abrasive cleansers, *steel-wool pads, gritty wash cloths, etc. can damage the control panel, and the interior and exterior oven surfaces. Use a sponge with a mild detergent or a paper towel with spray glass cleaner. Apply spray glass cleaner to a paper towel.*

Do not *spray directly on the oven.*

A NOTE TO YOU

Thank you for buying this appliance!

This appliance has everything you would expect of a superior appliance, plus the distinct style and thoughtful details, which contribute to the overall look of your home and your enjoyment of it.

To ensure that you enjoy many years of trouble-free operation, we developed this set of instructions. They contain valuable information concerning how to operate and maintain your new appliance properly and safely.

Please keep this Instruction For Use in a safe place for future reference.

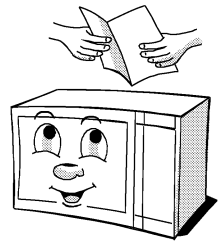

ENVIRONMENTAL HINTS

Packing

The packing box may be fully recycled as confirmed by the recycling symbol. Follow local disposal regulations. Keep potentially hazardous packaging (plastic bags, polystyrene etc.) out of the reach of children.

Appliance

The appliance is built from reusable materials. If you decide to scrap the appliance, it must be disposed of in compliance with local waste disposal regulations. Before scrapping, cut off the mains cord so that the appliance cannot be connected to the mains.

OVEN OVERVIEW

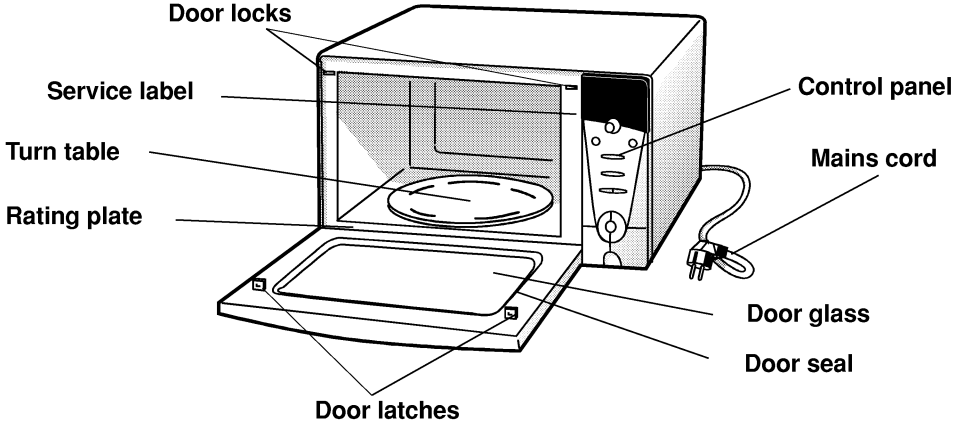

SYMBOL DESCRIPTION

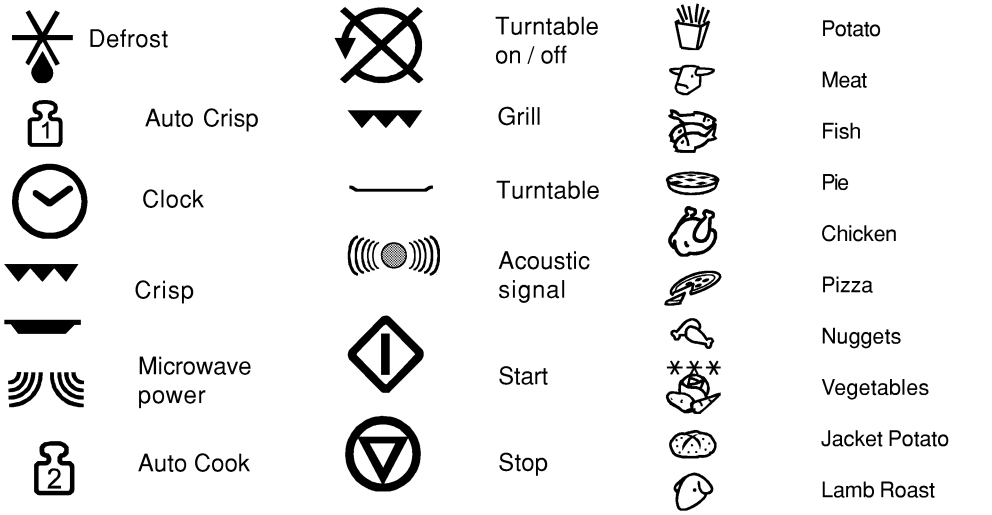

CHILD SAFETY / EMPTY OVEN START PROTECTION

This oven has an automatic child safety function which is activated one minute after the oven has returned to “stand by“. The oven is in “stand by“ when the 24 hour Clock is displayed, or if the Clock has not been set, when the display is blank.

The door must be opened and closed e.g. placing food in oven, before the safety function is released. If you try to operate the oven without putting food into it the display will show **“door“** indicating that you must open and close the door before operating the oven.

TURNTABLE ON / OFF

The turntable can be turned off in order to accommodate large dishes. This is useful when cooking a large au gratin, lasagne or a chicken. This enables you to use large square dishes too big to rotate without coming into contact with the cavity walls.

The table shows which functions it is possible to use with the turntable on or off. If you switch the turntable off before or during use of a function which does not support the turntable on standstill, the oven will stop and a signal will sound. The turntable symbol will flash briefly. The oven will return to standby mode if no buttons are pressed within 30 seconds.

Turntable on / off

Function	Model	On	Off
Jet Start	6MT244	x	x
Time and Power (manual microwave only settings)	6MT244	x	x
Auto Defrost	6MT244	x	
Grill	6MT244	x	
Grill & Microwaves	6MT244	x	x
Crisp™	6MT244	x	
Auto Crisp™	6MT244	x	

AUTO CRISP (cont.)

Icon	Menu Name	Weight Range	Procedures to Follow	Model
	Crisp™ Cook Chicken Roast Dinner	Chicken Weight Only 1kg-1.5kg	Brush chicken lightly with oil, tie legs together with string. Place breast side down onto lightly greased Crisp™-plate. Peel & cut potatoes and pumpkin (or other roasting vegetables) into serving size pieces, brush lightly with oil and arrange on Crisp™- plate with chicken. Set the program entering the weight of the chicken only. During cooking the oven will give an audible sound , working as quickly as possible turn chicken and vegetables over, drain excess juices and return to the oven, press start to continue cooking.After cooking remove the chicken, cover loosely with foil and allow to stand 10-15 minutes. For crisper vegetables, drain juices and place vegetables back into the oven for 5-8 minutes on Crisp™ or until cooked to your liking.	6MT 244

COOKING EGGS IN THE MICROWAVE OVEN

It is possible to cook eggs in the microwave (except boiled eggs) but these instructions must be followed, otherwise the eggs may explode causing damage to your microwave.

Eggs in the Microwave

- Try to use eggs from room temperature, refrigerated eggs may take a little longer.
- Never cook on Full power. Use 350 watts
- Always pierce the yolk. The yolk will lways cook quicker than the white as it is higher in fat and microwave energy if attracted to fat and sugar.
- Do not add salt before cooking, this will be toughen the eggs.

Poached

1 egg 1/2 minutes on / 350 watt
2 eggs 21/4-21/2 minutes on 350 watt
4 eggs 4 minutes on 350 watt

Crack egg/s into a greased microwave-safe cup or muffin container, pierce the yolk carefully with a toothpick . Cover with a piece of damp paper towel, and cook for a minimum time above and check (eggs should be slightly under cooked to your liking as they will continue to cook on standing). Allow to stand 30-60 seconds.

Scrambled

2 eggs / 2 teaspoons butter / 1 tablespoon milk 2 1/2-3 minutes on 350 watts
4 eggs / 3 teaspoons butter / 2 tablespoon milk 5-51/2 minutes on 350 watts

Using a fork whisk together eggs, butter and milk in a small bowl cook uncovered for the minimum time above stirring well HALF WAY thorugh cooking, add extra time if necessary. Remember eggs will complete their cooking on standing. Season to taste before serving.

Fried Eggs on Whirlpool Crisp™

1 egg 30-45 seconds on Crisp™
2 eggs 50-60 seconds on Crisp™

Preheat crisp plate for 2 minutes on Crisp™. Working quickly spray the plate with non stick spray. Carefully crack eggs onto hot plate. Cook for the minimum time above on Crisp™.

AUTO CRISP

Seven food classes have been preset. The chart below shows the weight range pre-programmed and the procedures you should follow to get best results. Food outside the weight range should be cooked manually.

Icon	Menu Name	Weight Range	Procedures to Follow	Model
	Crisp™ Reheat Potato Prod. *Ideal for Wedges Gems & fries*	250g-600g	For best results place Crisp™-plate into the oven and preheat the oven & plate for 3 minutes on Crisp™. Working quickly spread the wedges, gems or fries onto the hot plate and into the oven. Set the program. During cooking stir or turn food over.	6MT 244
	Crisp™ Reheat Pie *Ideal for frozen meat pies*	200-800g 1 pie = 200g	Place pie/s onto the Crisp™-plate. Set the program. After heating allow pies to stand 2-5 minutes before serving.	6MT 244
	Crisp™ Reheat Pizza. *Ideal for frozen pizzas*	200g-600g	For best results place Crisp™-plate into the oven and preheat the oven & plate for 3 minutes on Crisp™ . Working quickly place pizza onto the hot plate and into the oven. Set the program. After heating allow to stand 1-2 minutes before serving.	6MT 244
	Crisp™ Cook Lamb Roast Dinner. *Ideal for leg of lamb & easy carve lamb roast*	Meat Weight Only 700g-1.5kg	Place lamb skin side up onto lightly greased Crisp™-plate (lamb can be brushed with oil or spiked with rosemary & garlic if desired). Peel & cut potatoes and pumpkin (or other roasting vegetables) into serving size pieces, brush lightly with oil and arrange on Crisp™- plate with lamb. Set the program entering the weight of the lamb only. After cooking remove the lamb, cover loosely with foil and allow to stand 10-15minutes.For crisper vegetables, drain juices (using for gravy if desired) and place vegetables back into the oven for 5-8 minutes on Crisp™or until cooked to your liking.	6MT 244
	Crisp™ Reheat Chicken Nuggets	200g-600g	Place nuggets onto the Crisp™ plate. Set the program. During cooking the oven will give an audible sound, working as quickly as possible turn the nuggets over and press start to continue cooking. After cooking allow to stand 1-2 minutes before seving.	6MT 244

INSTALLATION

PRIOR TO CONNECTING

Check that the voltage on the rating plate corresponds to the voltage in your home.

Place the oven on a stable, even surface that is strong enough to hold the oven and the food utensils you put in it. The control side of the unit is the heavy side. Use care when handling.

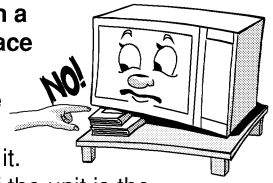

Position the oven at a distance from other heating sources. The cooling air, which is taken in by the oven, must not exceed 35°C temperature. For sufficient ventilation there must be a space of at least 15-cm above the oven. Ensure the microwave oven feet are in place and ensure the space underneath the oven is empty to allow for proper airflow. The oven can operate in an ambient temperature ranging from +5°C to +35°C.

Ensure that the appliance is not damaged. Check that the oven door closes firmly against the door support and that the internal door seal is not damaged. Empty the oven and clean the interior with a soft, damp cloth.

Do not operate this appliance if it has a damaged mains cord or plug, if it is not working properly, or if it has been damaged or dropped. Do not immerse the mains cord or plug in water. Keep the cord away from hot surfaces. Electrical shock, fire or other hazards may result.

AFTER CONNECTING

When the appliance is first plugged in or after a power failure, the display is blank. If required, the oven can display a 24-hour digital Clock. When the Clock function is not programmed the display will remain blank until the cooking time is set.

The oven can be operated only if the oven door is firmly closed.

Poor television reception and radio interference may result if the oven is located close to a TV, radio or aerial.

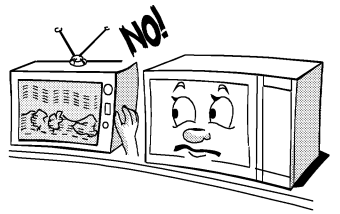

The earthing of this appliance is compulsory. The manufacturer will accept no responsibility for injury to persons, animals or damage to objects arising from the non-observance of this requirement.

⚠ WARNING!
THIS APPLIANCE MUST BE EARTHED! ⏚

SAFETY PRECAUTIONS

GENERAL
This appliance is designed for domestic use only!

The appliance should not be operated *without food in the oven when using microwaves. Operation in this manner is likely to damage the appliance.*

The ventilation openings *on the oven must not be covered. Blocking the air intake or exhaust vents may cause damage to the oven and poor cooking results.*

If you practice operating the oven, put a glass of water inside. The water will absorb the microwave energy and the oven will not be damaged.

Do not store or use this appliance outdoors. Do not use this product near a kitchen sink, in a wet basement, or near a swimming pool, or similar.

Do not use the cavity for any storage purposes.

Do not heat, or use flammable materials in or near the oven. Fumes can create a fire hazard or explosion.

Do not use corrosive chemicals or vapours in this appliance. This type of oven is specifically designed to heat or cook food. It is not designed for industrial or laboratory use.

Do not use your microwave oven for drying textiles, paper, spices, herbs, wood, flowers, fruit or other combustible materials. Fire could result.

Do not leave the oven unattended, especially when using paper, plastic or other combustible materials in the cooking process. Paper can char or burn and some plastics can melt if used when heating foods.

Do not immerse the mains cord or plug in water. Keep the cord away from hot surface.

Do not over-cook food. Fire could result.

If material inside / outside the oven should ignite, keep oven door closed and turn the oven off. Disconnect the power cord or shut off power at the fuse or circuit breaker panel.

Never lean on the door when the door is open. Injury could result.

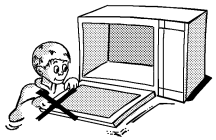

⚠ WARNING!

Only allow children *to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use. The appliance is not intended for use by young children or infirm persons without supervision. Young children should be supervised to ensure that they do not play with the appliance.*

Remove wire twist-ties *from paper or plastic bags before placing bag in the oven.*

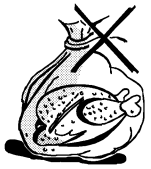

LIQUIDS
E.g. beverages or water in your microwave oven, overheating the liquid beyond boiling point can occur without evidence of bubbling. This could result in a sudden boil over of the hot liquid.
To prevent this possibility the following steps should be taken:

1. Avoid using straight-sided containers with narrow necks.
2. Stir the liquid before placing the container in the oven and let the teaspoon remain in the container.
3. After heating, allow standing for a short time, stirring again before carefully removing the container from the oven.

HOW TO USE THE AUTO CRISP

Your microwave oven has an automatic crisp function for frozen ready made foods, roast dinners. This function enables you to quickly reheat/cook your food in one step. The oven needs to know the type of food to be heated/cooked and the net weight of the food. When selecting the Auto Crisp function the oven will default to the Crisp Reheat PotatoProducts each subsequent press will select the next food class.

Auto	USER ACTION	OVEN REACTION
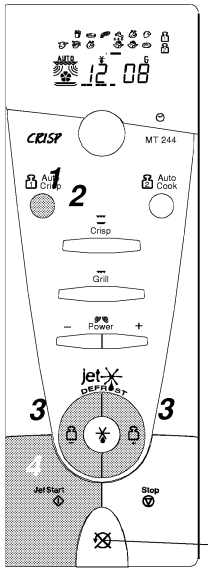	1. Press the Auto Crisp button.	* The first food category is indicated. * The Microwave symbol is lit. * The Grill symbol is lit. * The Crisp symbol is lit.
	2. Continue to press the Auto Crisp button to set the food class.	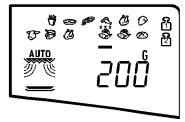 * The selected food class is indicated.
	3. Press the weight buttons to set the weight of the food.	* The set weight is displayed.
	4. Press the Start button.	* The Microwave symbol flashes. * The Grill symbol flashes. * The time is displayed counting down in minutes.
	On only	

Do not use with this function.



The oven needs to know the type of food and the net weight of it.

Only use the supplied Crisp-plate with this function. Other Crisp plates on the market will not give the correct result when using this function.

If the weight is less than the recommended weight: Use the manual Crisp function to crisp the food. Experience will give you the correct time to cook small amounts of food.

If the weight is greater than the recommended weight: Divide the food into two or more pieces and proceed to Auto-Crisp each piece separately. If it is not possible to divide the food, you must use the manual Crisp function. With greater amounts of food it is necessary to stir or turn the food to get the best results and this is best done with the manual Crisp function.
Please note that a few minutes standing time always improves the result.
It is not possible to change or switch the Power level or Grill, on/off, when using the Auto Crisp function.

IMPORTANT!

Take the frozen food *directly from the freezer and place it on the crisp plate.*
Do not place *any containers or wrappings on the Crisp plate! Only the food is to be placed on the Crisp plate*

HOW TO USE THE CRISP FUNCTION

The Crisp plate will give foods such as pizza, pies (& other pastry products) a nice crisp brown under surface. It can also be used for reheating potato products chips, wedges etc.,frying bacon, eggs and hamburgers.

	USER ACTION	OVEN REACTION
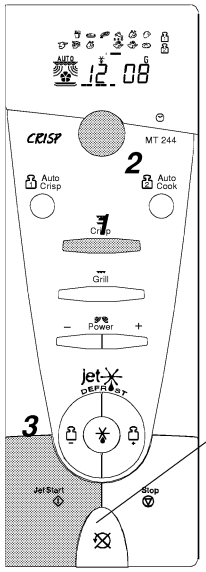	1. Press the Crisp button.	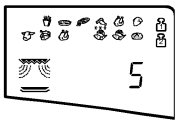 * 5 sec is displayed * The Grill symbol is lit * The Crisp symbol is lit * The Microwave symbol is lit.
	2. Turn the Adjust knob to set the time.	* The set time is displayed.
	3. Press the Start button.	* The Microwave symbol flashes. * The Grill symbol flashes * The cooking time is displayed counting down

On only

Do not use with this function.



The oven automatically works with Microwaves and Grill in order to heat the Crisp-plate. This way the Crisp-plate will rapidly reach its working temperature and begin to brown and crisp the food.

It is not possible to change or switch, the Power level or Grill, on/off, when using the Crisp function.

Place food directly on the Crisp-plate (ie do not place baking paper on the plate). If necessary lightly grease the Crisp-plate to make cleaning the plate easier.

The Crisp-plate should be preheated for optimum use. To preheat dial up 2 minutes on the adjust dial and press the Crisp Grill button.

Do not clean the Crisp-plate in the dishwasher . The Crisp-plate can be cleaned in mild detergent. Always let the Crisp-plate cool off before washing it, cooling it down quickly (in water) will damage it. Do not use steel wool pads, this will scratch and damage the surface.

⚠ IMPORTANT!

Ensure *that the Crisp-plate is correctly placed in the middle of the Glass turntable.*
The oven and the crisp-plate *become very hot when using this function.*
Do not place the hot crisp-plate *on any surface susceptible to heat.*
Be careful, not to touch *the ceiling beneath the Grill element.*
Use oven mittens *or* ***the special Crisp handle*** *supplied when removing the hot Crisp-plate.*

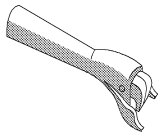

SAFETY SUGGESTIONS & PRECAUTIONS

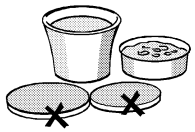

⚠ WARNING!

Do not use your microwave oven for heating food or liquids in airtight sealed containers. The pressure increases and may cause damage when opening or may explode.

EGGS

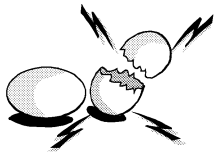

Do not use your microwave oven for cooking or reheating whole eggs with or without shell since they may explode.

For tips on cooking eggs please refer to the Cooking Eggs in Microwave Oven section.

DEEP-FRYING

Do not use your microwave oven for deep-frying, because the oil temperature cannot be controlled.

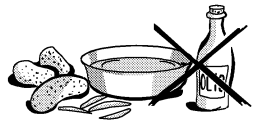

Always refer to a microwave cookbook for details. Especially, if cooking or reheating food that contains alcohol.

After heating baby food or liquids in a baby bottle or in a baby food jar, always stir and check the temperature before serving. This will ensure that the heat is evenly distributed and the risk of scalding or burns can be avoided.

Ensure the Lid and the Teat is removed before heating!

HANDS OFF

Use hot pads or oven mitts to prevent burns, when touching containers, oven parts, and pan after cooking.

Microwave energy does not heat containers, but the hot food does.
Heat from the grill will cause container and oven parts to become hot. Also note that the Crisp plate always becomes very hot when used.

ACCESSORIES

TURNTABLE SUPPORT

Use the turntable support under the Glass turntable. Never put any other utensils on the turntable support.

* Fit the turntable support in the oven.

GLASS TURNTABLE

Use the Glass turntable with all cooking methods. It collects the dripping juices and food particles that otherwise would stain and soil the interior of the oven.

* Place the Glass turntable on the turntable support.

CRISP HANDLE

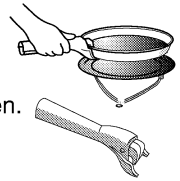

Use the supplied special Crisp handle to remove the hot Crisp plate from the oven.

CRISP-PLATE



Place the food directly on the Crisp-plate. Always use the Glass turntable as support when using the Crisp-plate.

Do not use the crisp-plate with the turntable on standstill.

Do not place any utensils on the Crisp-plate since it will quickly become very hot and is likely to cause damage to the utensil.

The Crisp-plate may be preheated before use (max. 3 min). Always use the Crisp function when preheating the crisp-plate.

TWO PLATE STACKER

The Two-plate stacker is excellent for two level reheating. Simply place one plate on the Glass Turntable and a second plate on the Two-plate stacker above.

Do not use together with the Grill or Crisp. It's made of plastic and will melt.

WIRE RACK



Use the Wire rack to put food on to allow the air to circulate properly around the food.

GENERAL

The type of accessory delivered with your oven may vary depending on model. Consult your Quick Reference Guide for the accessories supplied with your model.

There are a number of accessories available on the market. Before you buy, ensure they are suitable for microwave use.

When you put food and accessories in the microwave oven, ensure that they do not come in contact with the interior of the oven. **This is especially important with accessories made of metal or metal parts**.

If accessories contain metal and the metal comes in contact with the oven interior, while the oven is in operation, sparking can occur and the oven could be damaged.

If cooking with the turntable, always ensure that the turntable is able to turn freely before starting the oven.

Ensure that the utensils you use are oven proof and allow microwaves to pass through them before cooking.

HOW TO USE THE GRILL & MICROWAVES

During operation you can switch the Grill element on/off by pressing the Grill button. The Max. possible microwave power level when using the Grill is limited to 650W

Important!
Ensure that the dishes and containers you use are ovenproof and will allow microwaves to pass through them before using the Grill/Microwave combination.

This function can be used with the turntable function switched off. When cooking such foods as lasagne etc. with the turntable on standstill, you may rotate the food halfway through the cooking time.
Do not use the Crisp™-plate with the turntable on standstill.

It is possible to switch the microwaves off by reducing the microwave power level to 0 W. When 0 W is reached, the oven switches to Grill only mode. You should only use this feature if the turntable function is in operation, else the oven will switch off when 0 W is reached.

How to choose the correct power level	
Power level	**Suitable foods**
90 - 160 W	Large cuts of Meat
160 - 350 W	Fish
350 - 500 W	Poultry
500 - 650 W	Lasagne/Pasta dishes

	USER ACTION	OVEN REACTION
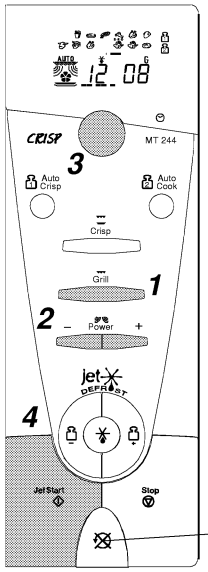	1. Press the Grill button.	* 5 sec is displayed. * The Grill symbol is lit.
	2. Press the Power button to set the power.	* The Microwave symbol is lit. * The set power level is displayed.
	3. Turn the Adjust knob.	* The time is displayed.
	4. Press the Start button.	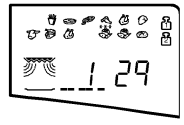 * The Microwave symbol flashes. * The Grill symbol is flickering. * The cooking time is displayed counting down.
	On or Off	

Do not use with this function.



HOW TO USE THE GRILL

Use this function to quickly give a pleasant brown surface to the food.

	USER ACTION	OVEN REACTION
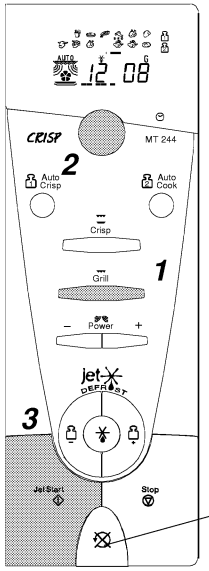	1. Press the Grill button.	* 5 sec is displayed. * The Grill symbol is lit. 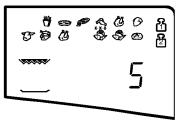
	2. Turn the Adjust knob to set the time.	* The set time is displayed.
	3. Press the Start button.	* The Grill symbol flashes * The cooking time is displayed counting down.

On only

Do not use with this function.



Do not leave the oven door open for long periods when the Grill is in operation, as this will cause a drop in temperature.

Note:
Pressing the Grill button during cooking switches the Grill element on and off. The timer will continue to count down when the Grill element is turned off.

⚠ IMPORTANT!

Ensure *that the utensils used are heat resistant and ovenproof before grilling with them.*
Do not *use plastic utensils when grilling. They will melt. Items of wood or paper are not suitable either.*

COOKING INTERRUPTION



To interrupt the cooking process:
The cooking process can be temporarily interrupted to check, turn or stir the food by opening the door. The setting will remain lit for 10 minutes to indicate the interruption, after which it will disappear. If you open the door please consider the following:

To restart the cooking process:
Close the door and press the START button once.
Note: The cooking process continues from where it was interrupted if the START button is pressed once. Pressing the START button twice will increase the time by 30 seconds.

If you don't want to continue cooking:
Remove the food, close the door and press the STOP button

If you don't interrupt the cooking process:
If the cooking process has not been interrupted, a beep will signal the completion of the programme and, if the Stop button is not pressed, will continue to sound every minute for 10 minutes.
Note: It is possible to alter both Time and Power settings while cooking though not when the automatic functions are being used.

Continued cooking:
When the cooking process is complete, the oven will hold the current settings for 10 minutes unless the STOP button is pressed or the door is opened. This enables you to continue cooking simply by pressing the START button. Cooking may also be extended by pressing the START button a number of times. One press for each 30 seconds. All other settings remain the same.
Note: The oven will only hold the settings for 30 seconds if the door is opened and then closed after the cooking is finished.

HOW TO CHOOSE POWER LEVEL?

Your Whirlpool microwave oven measures the power levels by wattage. It is important to vary the power according to the food you are cooking. Following are our suggestions;

Power	Similar to:	Suggested use
Jet (800W)		Ideal for heating beverages, clear soups & water.
Jet/750watts	High	Heating liquids, cooking vegetables, fruit, rice and pasta etc.
650 watts	Medium High	Cooking chicken, mince, heating canned foods.
500 watts	Medium	For cooking cakes, slices, meat, seafood and most reheating.
350 watts	Medium Low	Ideal for long slow simmer of casseroles and soups.
160 watts	Defrost	Manually defrosting food.
90 watts	Low	Softening butter, cream cheese and icecream. Keeping food warm.
0 watts	Standing time	To be used when setting the standing time.

HOW TO USE THE OPTIONAL CLOCK DISPLAY

When the appliance is first plugged in or after a power failure, the display is blank. If required the oven can display a 24 hour digital clock. When the clock function is not programmed the display will remain blank until the cooking time is set.

Keep the door open when setting the clock. This gives you 10 minutes to complete the setting of the Clock. If the door is kept shut, each step must be completed within 30 seconds. Otherwise the oven will return to “stand by” and it will be necessary to start again from the beginning.

USER ACTION	OVEN REACTION
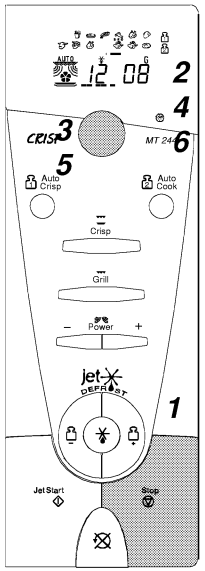	
1. Press the Stop button.	* The two dots are lit.
2. Press the Clock button for 3 seconds.	* The left-hand digit (hours) flicker.
3. Turn the Adjust knob to set the hours.	* The set hours will continue to flicker
4. Press the Clock button again.	* The two right hand digits (minutes) flicker.
5. Turn the Adjust knob to set the minutes.	* The set minutes will continue to flicker.
6. Press the Clock button again.	* The Clock is set and in operation.

If you wish to remove the Clock from the display once it has been set, simply press the Clock button and then press the Stop button.

To reinstate the Clock, follow the above procedure.

AUTO COOK FUNCTION

Auto Cook	USER ACTION	OVEN REACTION
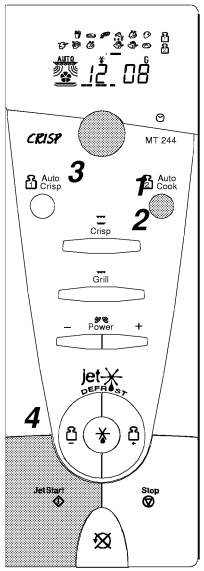	1. Press the AUTO COOK button.	* The display now shows weight in grams (g.) and the first of the three food classes is indicated.
	2. Continue to press the AUTO COOK button to select the food class needed	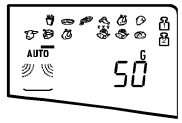
	3. Turn the ADJUST knob to set the weight of the food to be cooked.	* The weight is displayed.
	4. Press the START button.	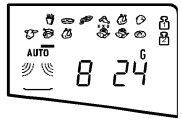 * The AUTO COOK process begins. * The Microwave working symbol flashes. * The AUTO COOK time is displayed counting down

The turntable must be switched on with this function.



When the AUTO COOK program is finished a signal will sound and the defrosting process will stop.

AUTO COOK

Auto Cook **Your microwave** oven has a special automatic microwave cook function which provides you with good end results. The oven needs to know the type of food to be defrosted/ cooked and the net weight of the food. Three food classes have been programmed into your oven. When selecting Auto Cook the oven will default to menu, each subsequent press will select the next food class.

Three food classes have been preset for cooking. The chart below shows the weight range pre-programmed and the procedures you should follow to get best results. Food outside the weight range should be cooked manually.

Icon	Menu Name	Weight Range	Procedures to Follow
	Cook Frozen vegetables **Hard Veg**- Carrots **Medium Veg-** Broccoli, cauliflower & mixed vegetables **Soft Veg-** Beans, Peas	50g-600g	Before cooking, separate the vegetables as much as possible. Arrange vegetables in a shallow dish with the hard vegetables around the outer edge, soft vegetables in the centre & medium vegetables in between. Cover with a lid or plastic wrap. After cooking allow to stand 1-2 minutes.
	Cook Fresh Vegetables **Hard Veg-**Carrots, sweet potato **Medium Veg-** Broccoli, cauliflower & squash etc - **Soft Veg-** Beans, Peas, zucchini	50g-600g	Prepare vegetables cutting into even size pieces. Wash vegetables. Arrange vegetables in a shallow dish with the hard vegetables around the outer edge, soft vegetables in the centre & medium vegetables in between. Cover with a lid or plastic wrap. After cooking allow to stand 1-2 minutes.
	Cook Jacket Potato	150g-600g 1 potato = 150g	Pierce each potato 3-4 times with a fork. Place evenly onto the turntable. After cooking wrap potatoes in foil and allow to stand 5-10 minutes.

JET START FUNCTION

When the Jet Start button is pressed the oven will operate at full power (800W) for 30 seconds. Each subsequent press will increase the time by 30 seconds. Pressing the Jet Start button during normal cooking simply increases the time by 30 seconds in each press. The power is not affected. consider the following:

Use this function for the quick reheating of items such as clear soups, coffee, tea or other foods with high water content.

If you open and then close the door during normal cooking (cooking interruption), restarting by pressing the Jet Start button once will not affect the Time and Power settings. Pressing the Jet Start button again will increase the time by 30 seconds for each press.

This function can be used with the turntable function switched off.

Do not use the crisp-plate with the turntable on standstill.

USER ACTION

OVEN REACTION

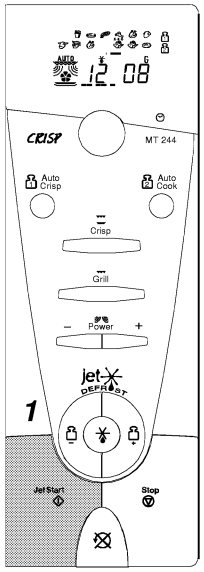

1. Press the JET START button

* The Microwave working symbol flashes.
* The power level bar is scrolling.
* The cooking time is displayed counting down.

When the time has elapsed a signal will sound and the process will stop

HOW TO COOK & REHEAT WITH MICROWAVES

Use this function for normal cooking and reheating, or quick reheating (Jet Start) of items such as clear soups, coffee, tea or other foods with high water content.

USER ACTION	OVEN REACTION
1. To select the required power level, press the - / + power buttons.	* The power level is displayed.
2. Turn the Adjust knob to set the time.	* The time is displayed.
3. Press the Start button.	* The Microwave working symbol flashes. * The cooking time is displayed counting down. * When the cooking time time has elapsed a signal will sound and the cooking process will stop.

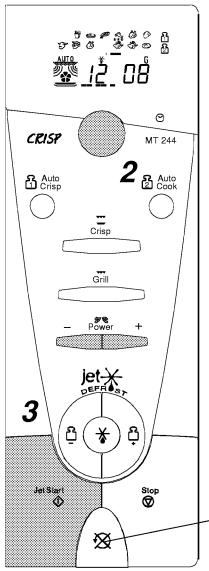

On or Off

Do not use with this function.



Do not use Crisp Plate or wire rack with this program.

Once the cooking process has been started:
The time can easily be increased in 30 second steps by pressing the Start button. Each press increases the time with 30 seconds. You may also alter the time by turning the Adjust knob to increase or decrease the time.
Pressing the power button may also change the power level. The first press will show you the current powerlevel. Press the power button repeatedly to change power level.

This function can be used with the turntable switched off. When cooking foods in large dishes (ie lasagne or au gratin) with the turntable switched off, you may rotate the food halfway during the cooking time.

HOW TO USE THE JET DEFROST

Use this function for defrosting ONLY. Jet Defrost can only be used for very fast defrosting of frozen foods belonging to the 5 categories listed below.

USER ACTION	OVEN REACTION
1. Press the Jet Defrost button.	* The display now shows weight in grams (gr.) and the first of the five food classes is indicated.
2. Continue to press the Jet Defrost button to select food class.	* The selected food class is indicated.
3. Press the weight buttons or use the adjust knob to enter the weight.	* The set weight is displayed.
4. Press the Start button.	* The defrosting process begins. * The Microwave working symbol flashes. * The defrosting time is displayed counting down
5. Midway thru the defrosting process the oven stops and prompts you to “TURN FOOD”.	— Open the door. — Turn the food. — Close the door and restart by pressing the Jet Start button.

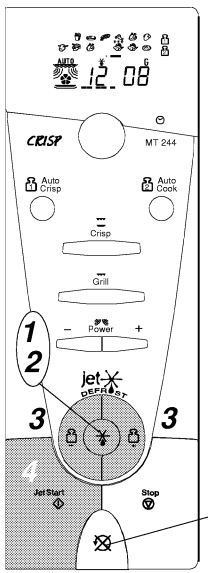

On only

Do not use with this function.



Note: the oven continues automatically after 2 min if the food hasn’t been turned. The defrosting time will be longer in this case.

The oven needs to know the type of food and the net weight of it.

MEAT (100 g - 2 Kg)

FISH (100 g - 2 Kg)

POULTRY (100 g - 3 Kg)

The turntable must be switched on with this function.

If the weight is lesser or greater than recommended weight:
Follow the procedure for “How to cook and reheat with microwaves” and choose 160 W when defrosting. When softening ice cream or butter you should adjust the setting to 90 W.

If the food is warmer than deep-freeze temperature (-18°C), choose lower weight of the food.

If the food is colder than deep-freeze temperature (-18°C), choose higher weight of the food.